




## PKD Fasenfräser

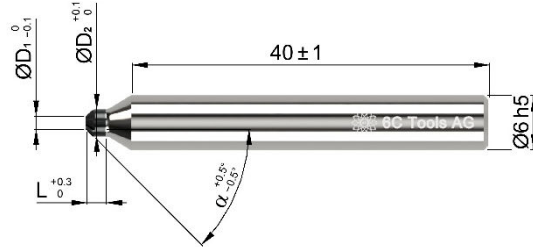

Artikel	D <sub>2</sub>	D <sub>1</sub>	L	α	Z
CM-P-1045-010-004	1.0	0.4	1.0	45	5
CM-P-1045-015-008	1.5	0.8	1.5	45	6
CM-P-1045-020-010	2.0	1.0	1.5	45	6
CM-P-1045-025-015	2.5	1.5	2.0	45	7
CM-P-1045-030-020	3.0	2.0	2.0	45	8
CM-P-1030-010-004	1.0	0.4	1.5	30	5
CM-P-1030-015-008	1.5	0.8	1.5	30	6
CM-P-1030-020-010	2.0	1.0	2.0	30	6
CM-P-1030-025-015	2.5	1.5	2.0	30	7
CM-P-1030-030-020	3.0	2.0	2.0	30	8

Beispiel: Fasenfräser Fase=45° → -1045; D<sub>2</sub>=3.0mm → -030; D<sub>1</sub>=2.0mm → -020 → CM-P-1045-030-020